


**WARNING: DO NOT LAY TV FACE DOWN ON GLASS!**

### Step 1. Mount TV Rails to the back of the flat panel


**TV:** Make sure the TV rails are mounted at an equal distance from the top of the TV and as close to centered as possible. Use same hole location on both rails. The M4 / M5 Washer should always be used with the M4 and M5 bolts so the head of the bolts can not pass through the holes in the TV rails. A 1/2" Plastic spacer is also provided for use with the M4 and M5 TV mount bolts and a 3/4" Plastic spacer is provided for use with the M6 and M8 TV mount bolts on TV's with curved or recessed back panels.

**Plastic spacers are NOT needed for TV's with flat backs.** Some TV's have shallow threaded inserts; we have provided 4 extra M4/M5 washers that may be added if the provided bolts are too long. **Make sure bolts are tight.**


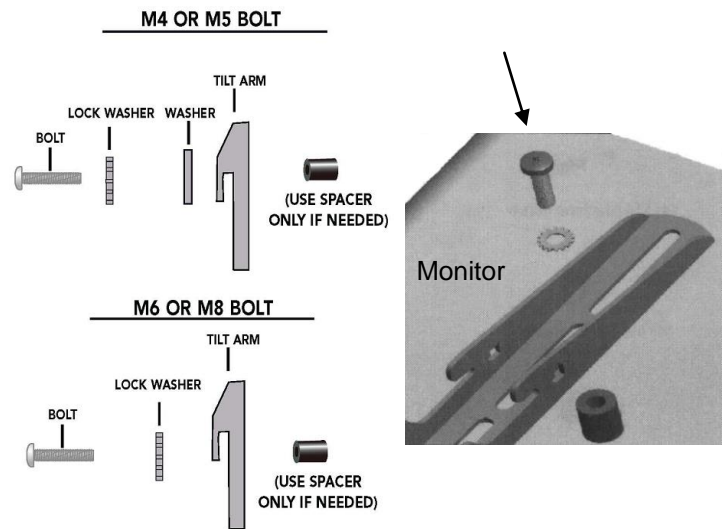


### Step 2. Attach Wall Plate to Extrusions


Tighten 1/4"-20 x 5/8" Button Head Cap Screw using 5/32" Hex Wrench.

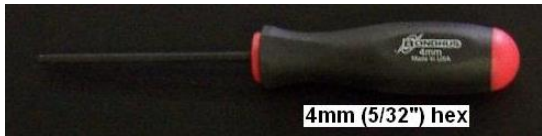


(x4) 10mm 1/4"-20 T-nut

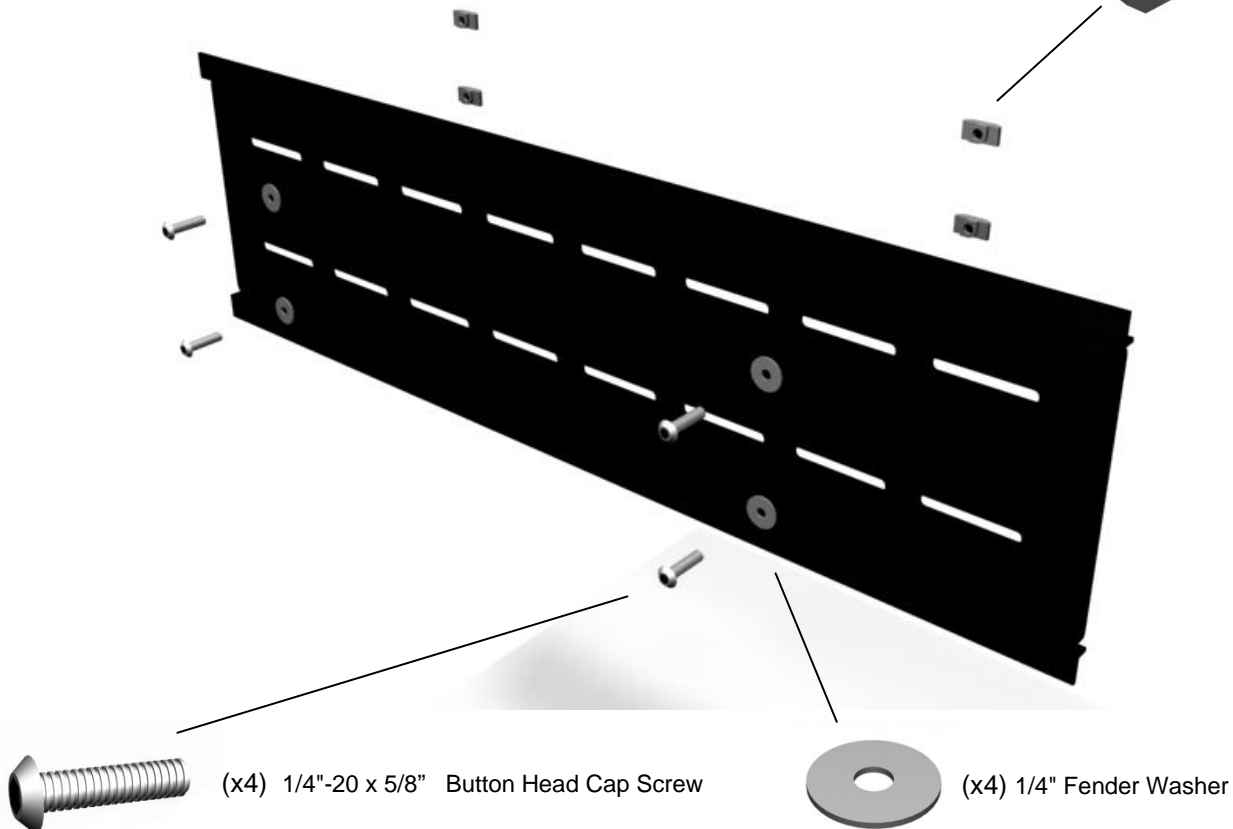

**Step 3.** Place mount w/ T-nuts into columns slots.

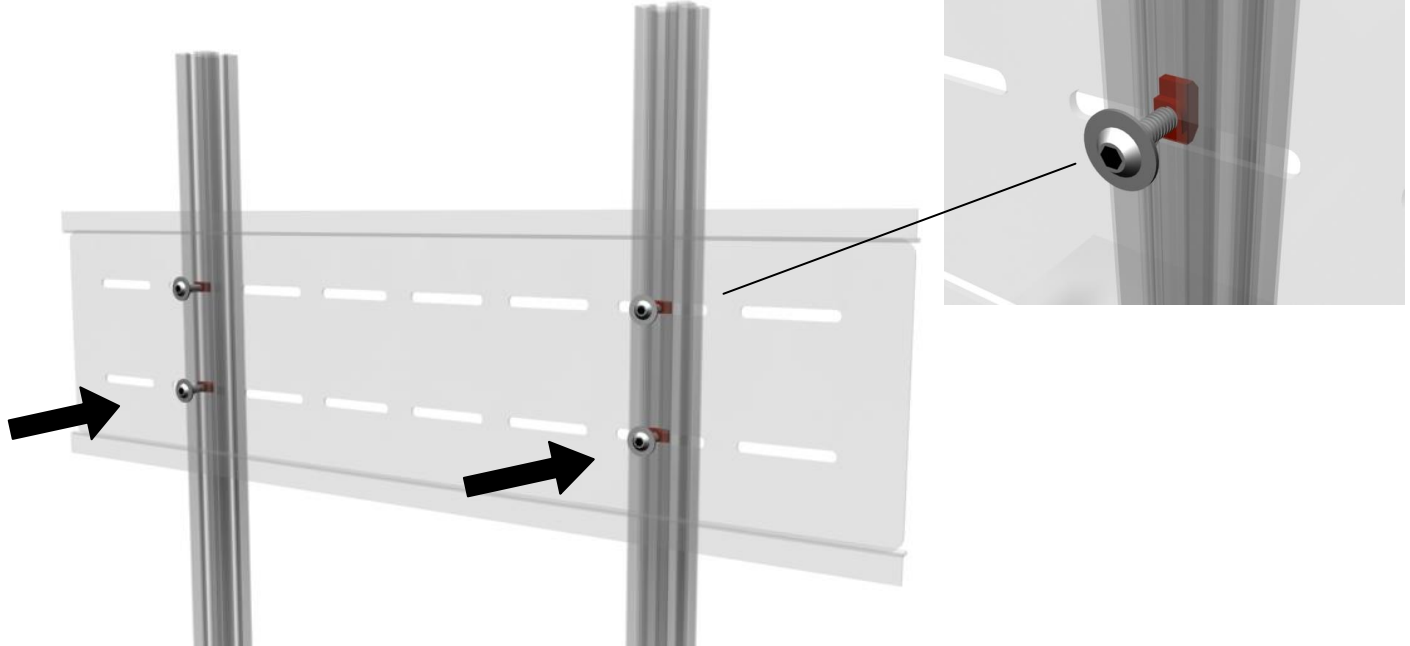

**Step 4.** Tighten screws using 5/32" hex Wrench.

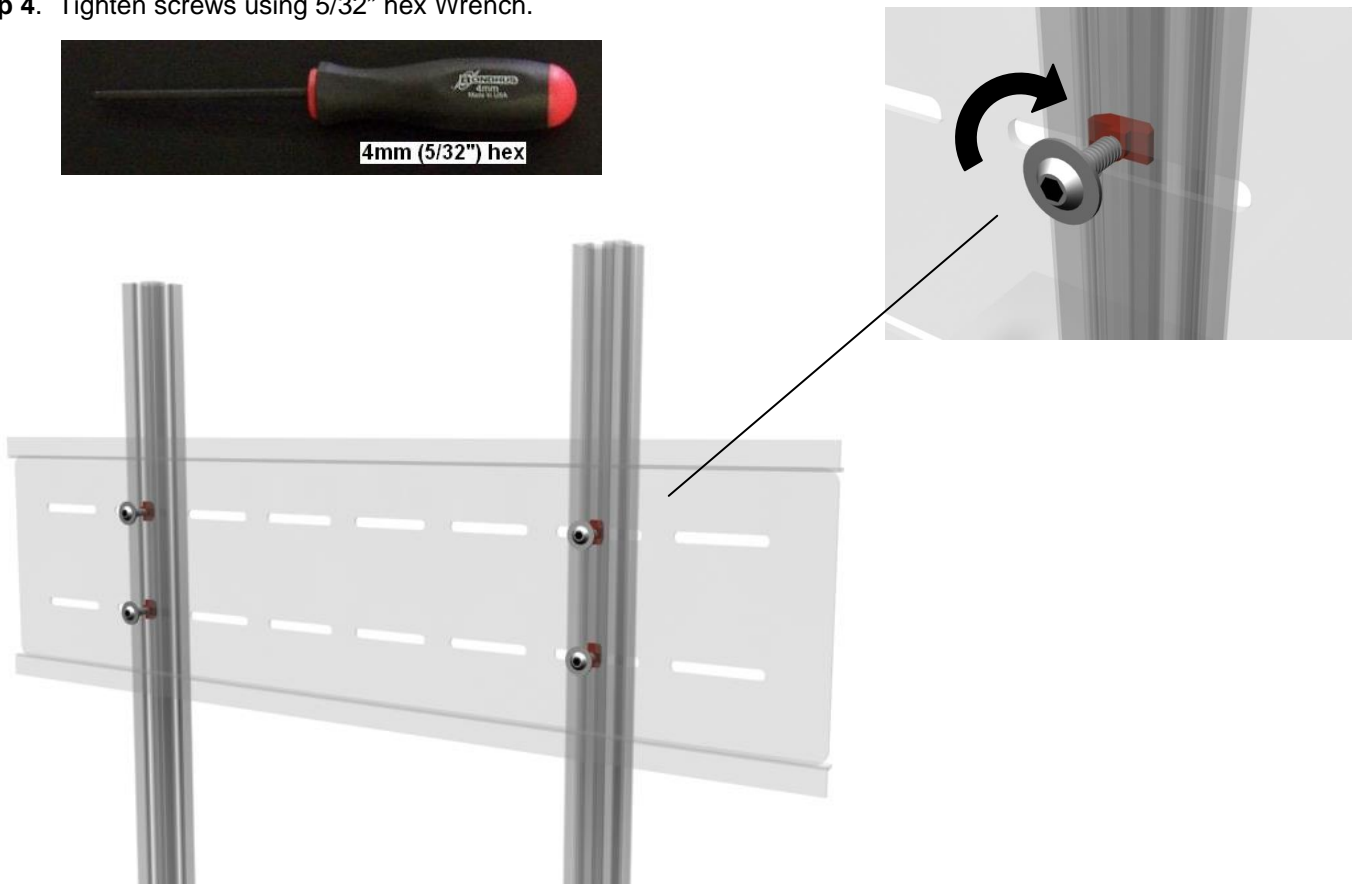

**Step 5. Hang TV onto wall plate:** First hook TV rails over the top of the wall plate, then let bottom of the TV rails rotate in under the bottom of the wall plate.

**(Make sure the lock lever is turned horizontally when attaching)**

