

SQU-1402

SET UP INSTRUCTIONS:


1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS:
REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

1. UNZIP COVER ZIPPERS
2. CAREFULLY REMOVE FABRIC COVER
3. CLOSE ALL ZIPPERS
4. FOLD OR ROLL NEATLY
5. PLACE FABRIC IN COVER BAG

FRAME ASSEMBLY

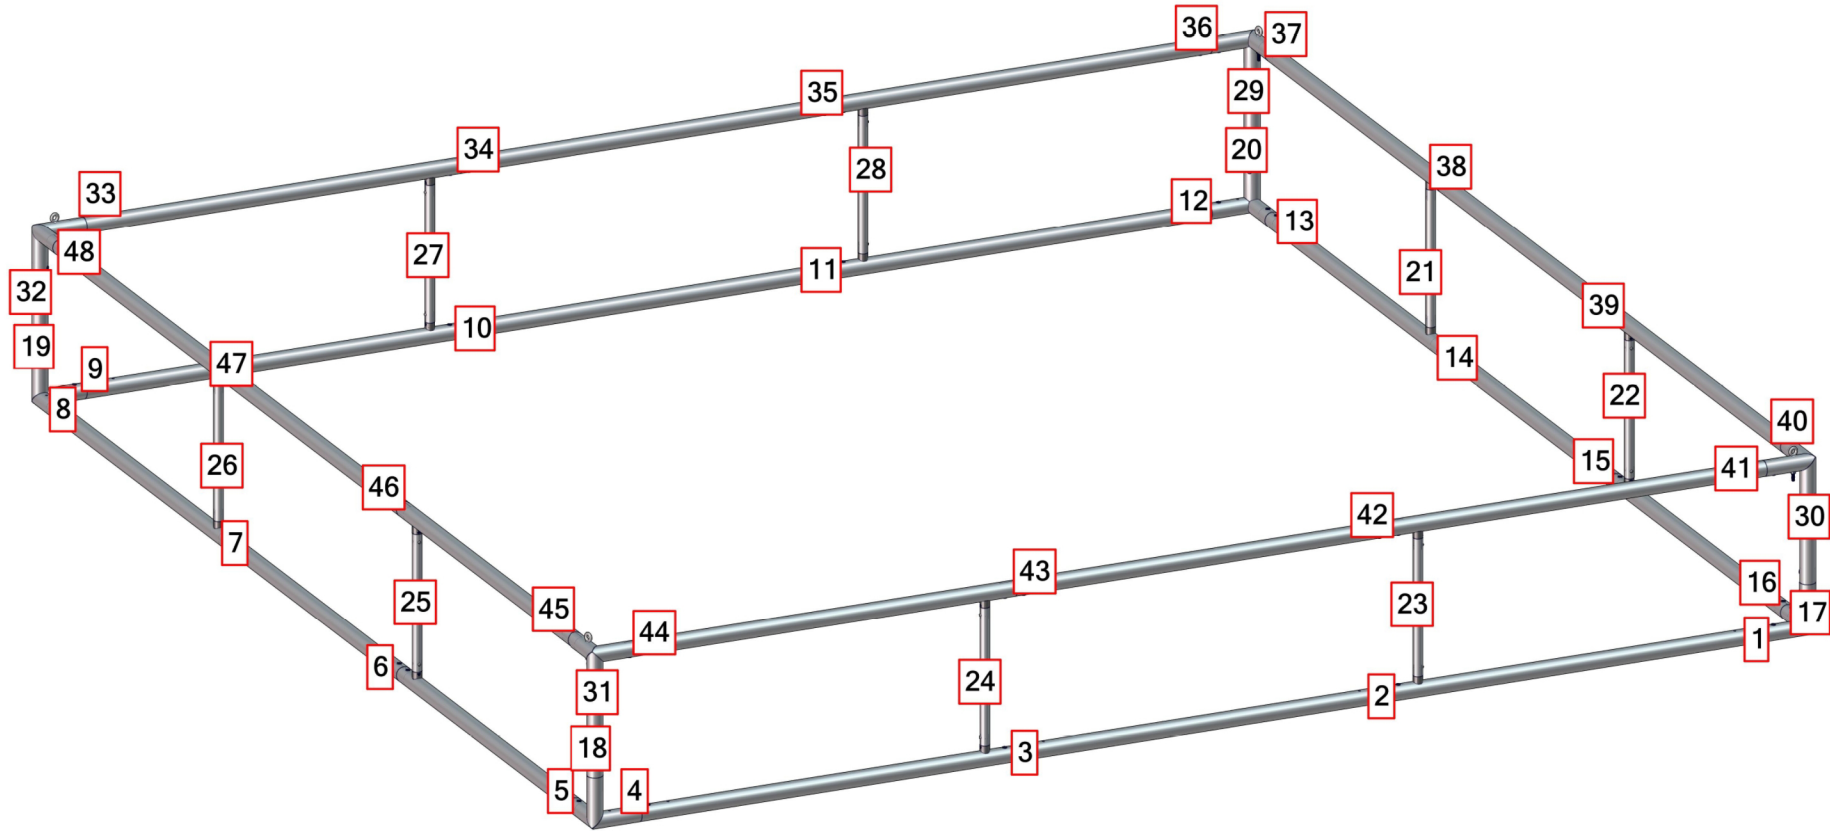

TOTAL WEIGHT:127.4 (lbs)
MAX SIZE:51.3 (in)
HARDWARE:101.7 (lbs)
GRAPHIC:15.5 (lbs)

| QTY | CODE | DESCRIPTION |
|-----|---------------|--|
| 1 | CH-SP4-HD-12 | 4-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 144" LENGTHS 1/8" CABLE |
| 8 | CORNER-50-90° | 3 WAY WELDED CORNER MADE FROM 2" TUBING (90°) |
| 40 | ES-50 | EXPANDING SPIGOT FOR 50MM TUBE |
| 8 | SPDR-30-S2-2 | 30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 2' STRUCTURES |
| 4 | SPDR-50-S2-2 | 2" TUBING SPREADER FOR 2' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES |
| 4 | EYE BOLT | 5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES |
| 24 | SQU-14-T1 | TUBE 1 FOR 14' FOUR SIDED HANGING FABRIC STRUCTURES |

