SQU-1405

SET UP INSTRUCTIONS:

CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS

2. CONNECT SIDE TUBES

3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE

4. CAREFULLY REMOVE FABRIC COVER FROM BAG 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME

6. PULL COVER CAREFULLY UP TO THE TOP

CLOSE ALL ZIPPERS

8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS

10. COMPLETELY TIGHTEN THREADED CONNECTORS


BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME


FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER


3. CLOSE ALL ZIPPERS


4. FOLD OR ROLL NEATLY


5. PLACE FABRIC IN COVER BAG

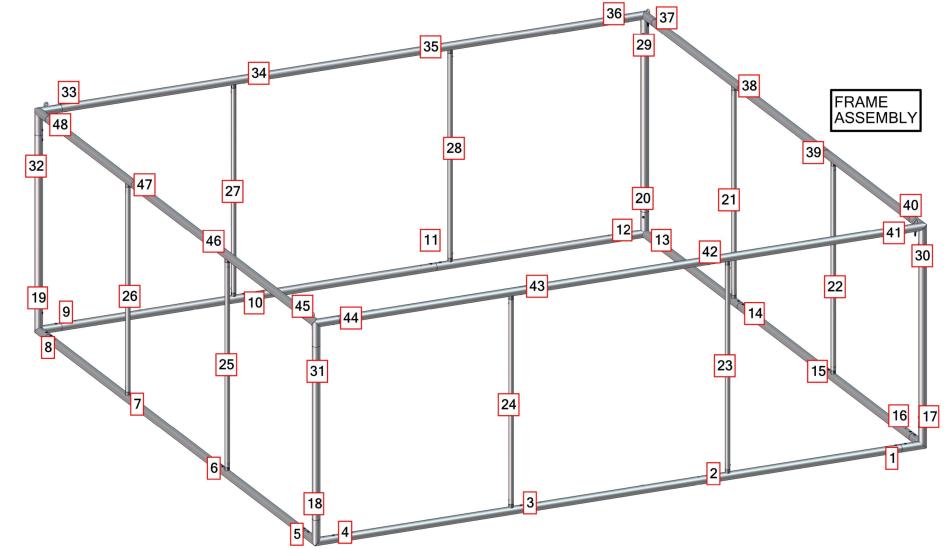

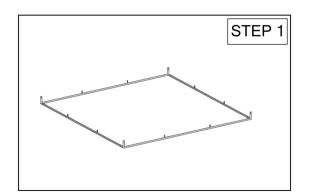

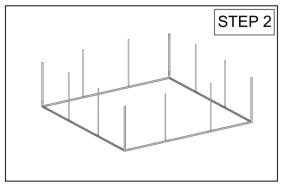

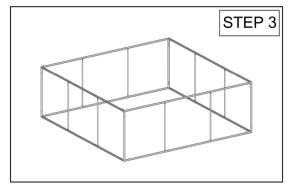

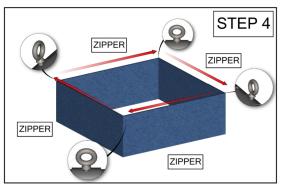

TOTAL WEIGHT: 164.6 (lbs)

MAX SIZE:51.3 (in)

HARDWARE:114.4 (lbs)

GRAPHIC:38.8 (lbs) QTY CODE **DESCRIPTION** CH-SP4-HD-12 4-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 144" LENGTHS 1/8" CABLE CORNER-50-90° 3 WAY WELDED CORNER MADE FROM 2" TUBING (90°) 40 ES-50 **EXPANDING SPIGOT FOR 50MM TUBE**

SPDR-30-S2-5 30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 5' STRUCTURES SPDR-50-S2-5 2" TUBING SPREADER FOR 5' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES 5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES **EYE BOLT**

SQU-14-T1 TUBE 1 FOR 14' FOUR SIDED HANGING FABRIC STRUCTURES



