



PIN-1804

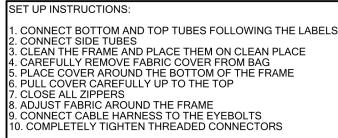


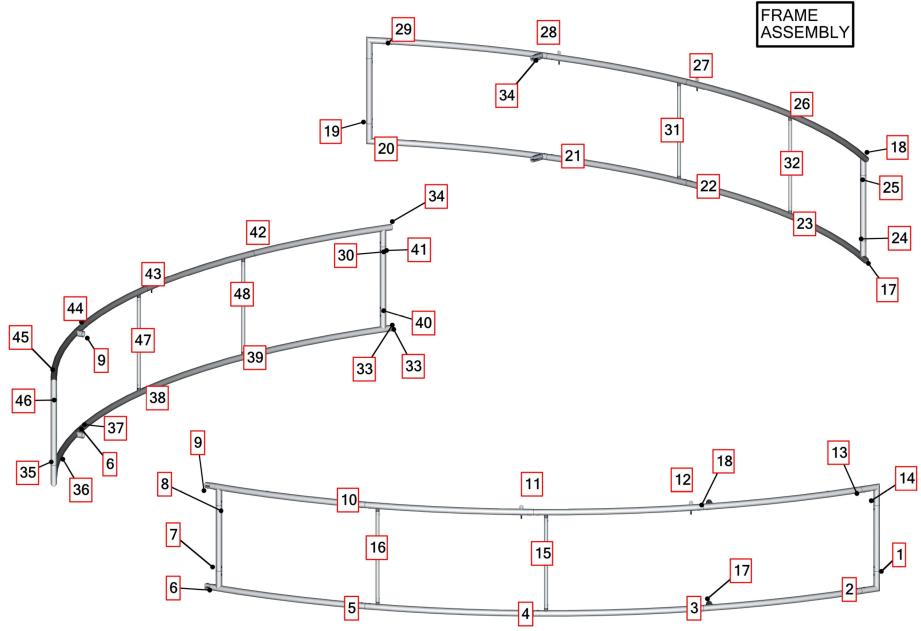


2. CONNECT SIDE TUBES 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE 4. CAREFULLY REMOVE FABRIC COVER FROM BAG 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME 6. PULL COVER CAREFULLY UP TO THE TOP 7. CLOSE ALL ZIPPERS 8. ADJUST FABRIC AROUND THE FRAME 9. CONNECT CABLE HARNESS TO THE EYEBOLTS 10. COMPLETELY TIGHTEN THREADED CONNECTORS BREAK DOWN INSTRUCTIONS:		20 34	21	31 32	26 18 25
REVERSE SET-UP STEPS TO BREAKDOWN FRAME	42				23 24
FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER 3. CLOSE ALL ZIPPERS 4. FOLD OR ROLL NEATLY 5. PLACE FABRIC IN COVER BAG	43 48	30 41			17
	45 47 39 46 38	33 33			
	35 6 8	10	11	12	13
TOTAL WEIGHT: 160.0 (lbs) MAX SIZE: 55.5 (in) HARDWARE: 116.8 (lbs) GRAPHIC:31.5 (lbs)	7	16	15	3	2
QTY CODE DESCRIPTION 3 EYE BOLT 5/16-18X3.125" PARTIALLY THE	READED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES				
6 CORNER-50-90°-2WAY 2IN TUBE 90° WELDED 2-WAY					
42 ES-50 EXPANDING SPIGOT FOR 50M					

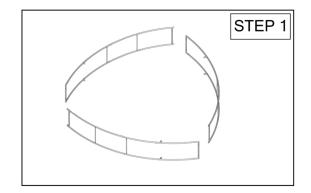

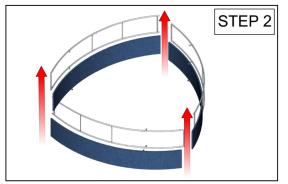

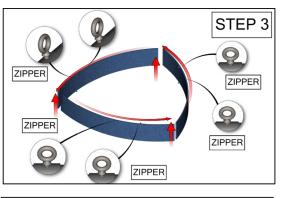

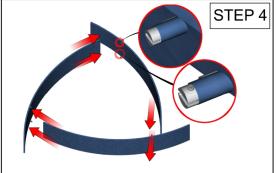

QTY	CODE	DESCRIPTION
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
6	CORNER-50-90°-2WAY	2IN TUBE 90° WELDED 2-WAY CORNER
42	ES-50	EXPANDING SPIGOT FOR 50MM TUBE
12	PIN-18-T2	TUBE 2 FOR 18' PINWHEEL HANGING FABRIC STRUCTURE
3	PIN-18-T1	TUBE 1 FOR 18' PINWHEEL HANGING FABRIC STRUCTURE
3	PIN-18-T1-M	TUBE 1 FOR 18' PINWHEEL HANGING FABRIC STRUCTURE (MIRROR)
3	PIN-18-T3-M	TUBE 3 FOR 18' PINWHEEL HANGING FABRIC STRUCTURE (MIRROR)
3	PIN-18-T3	TUBE 3 FOR 18' PINWHEEL HANGING FABRIC STRUCTURE
6	SPDR-30-S2-4	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 4' STRUCTURES
6	SPDR-50-S2-4	2" TUBING SPREADER FOR 4' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES



