

SHD-1602

FRAME
ASSEMBLY

- SET UP INSTRUCTIONS:
1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS

2. CONNECT SIDE TUBES

3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE

4. CAREFULLY REMOVE FABRIC COVER FROM BAG

5. PLACE COVER AROUND THE BOTTOM OF THE FRAME

6. PULL COVER CAREFULLY UP TO THE TOP

7. CLOSE ALL ZIPPERS

8. ADJUST FABRIC AROUND THE FRAME

9. CONNECT CABLE HARNESS TO THE EYEBOLTS

10. COMPLETELY TIGHTEN THREADED CONNECTORS

- BREAK DOWN INSTRUCTIONS:
- REVERSE SET-UP STEPS TO BREAKDOWN FRAME


- FABRIC CARE INSTRUCTIONS:
1. UNZIP COVER ZIPPERS

2. CAREFULLY REMOVE FABRIC COVER

3. CLOSE ALL ZIPPERS

4. FOLD OR ROLL NEATLY

5. PLACE FABRIC IN COVER BAG

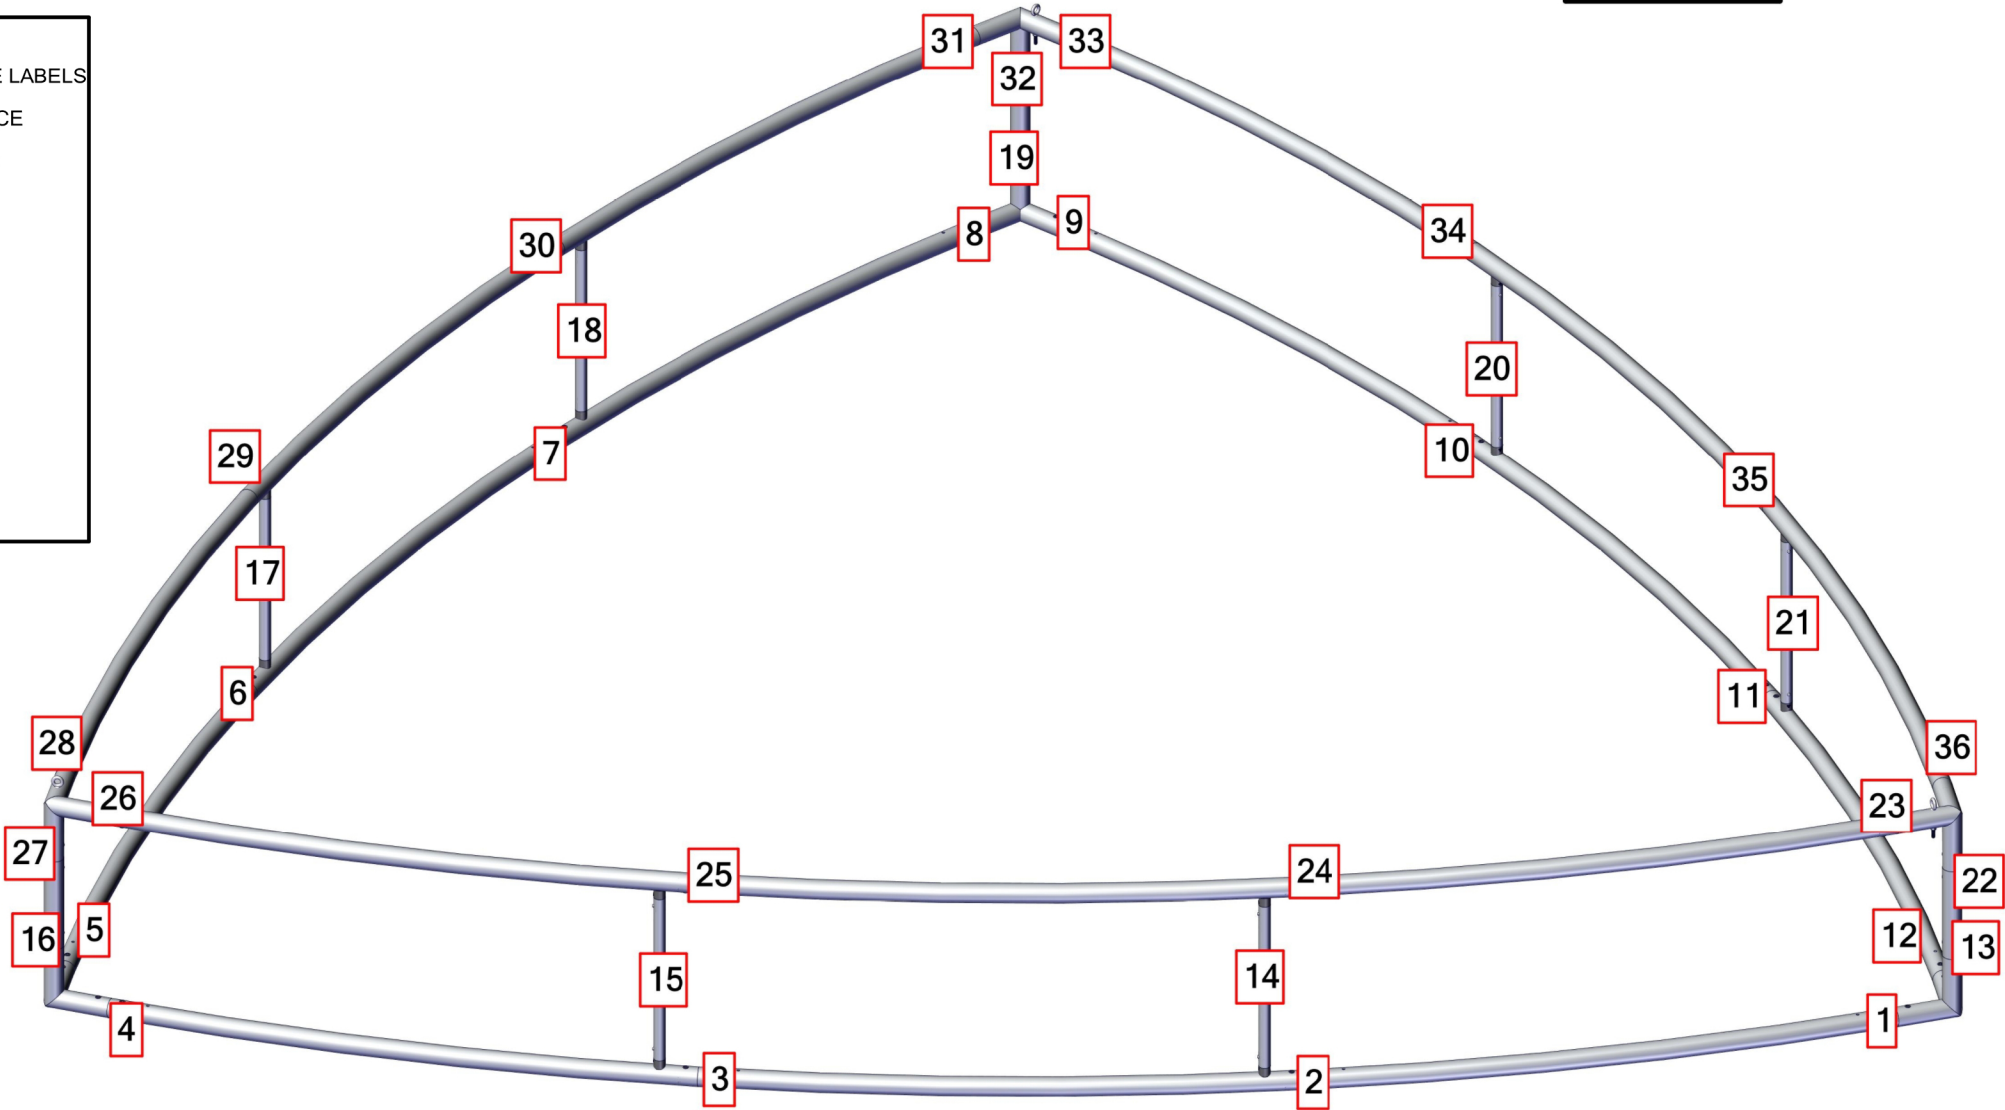

TOTAL WEIGHT: 106.3 (lbs)

MAX SIZE:60.8 (in)

HARDWARE:84.2 (lbs)

GRAPHIC:13.7 (lbs)

QTY	CODE	DESCRIPTION
3	SPDR-50-S2-2	2" TUBING SPREADER FOR 2' HIGH FOR FOUR SIDED HANGING FABRIC STRUCTURES
1	CH-SP3-HD-14	3-CABLE SINGLE POINT HEAVY DUTY HARNESS WITH 168" LENGTHS 1/8" CABLE
3	EYE BOLT	5/16-18X3.125" PARTIALLY THREADED EYE BOLT FOR 2" TUBING FABRIC STRUCTURES
6	SPDR-30-S2-2	30MM STRAIGHT SPREADER FOR 50MM CONNECTIONS OF 2' STRUCTURES
6	CORNER-50-100°	3 WAY WELDED CORNER MADE FROM 2" TUBING (100°)
18	SHD-16-T1	TUBE 1 FOR 16' CONVEX THREE SIDED HANGING FABRIC STRUCTURES

